





LAN Parameters on Tetra Lane Series

1. Power on device
2. Let the device initialize the software and boot fully
3. Once the device is all the way booted, please press 0001 ins sequence to reach the communication menu
4. The device will display the below options...

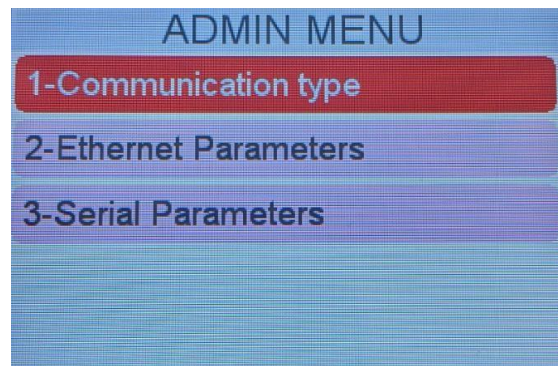

5. Please proceed into the first option "ETHERNET PARAMETERS"
6. From here you will be able to find Ethernet settings, including but not limited to, PING URL function.

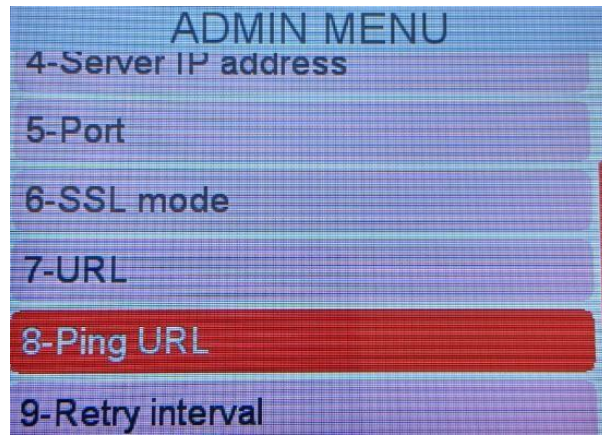

7. To save your settings, press the CANCEL (red X) button on the keypad and press the enter button to confirm changes that were made.