




Checking encryption on Pax devices with Datacap / without Datacap (Android)

If your unit does **not** have Datacap skip to step 3.


1. When the unit is at the “Welcome” screen swipe up from the bottom of the screen. You will see a bar appear at the bottom of the screen with a back arrow on it. Double tap this arrow quickly. This will bring up a password prompt.
2. Enter the password “pax9876@@” and press “OK” Once done you will be at the desktop of the Pax device.
3. Look for an app called “PaxInject” and tap on this application. (See photo below)



4. Once PaxInject has opened tap on “US INJECTION” option. This will bring up a password prompt.

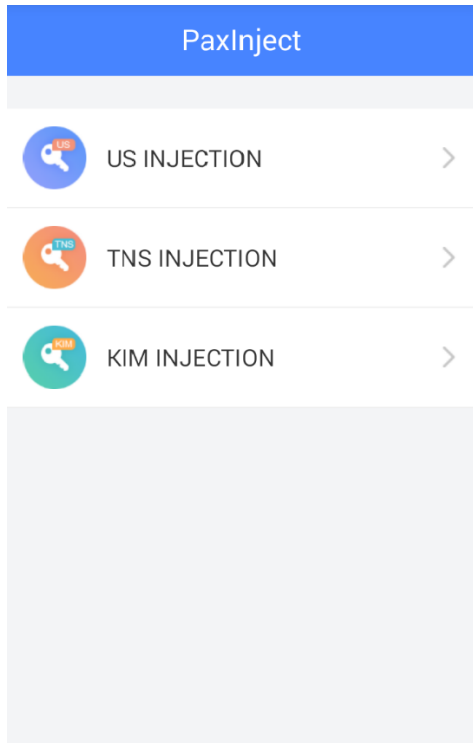

5. Enter the password "729465328"
6. Once inside the US INJECTION menu look for "STATUS" option and tap on this.

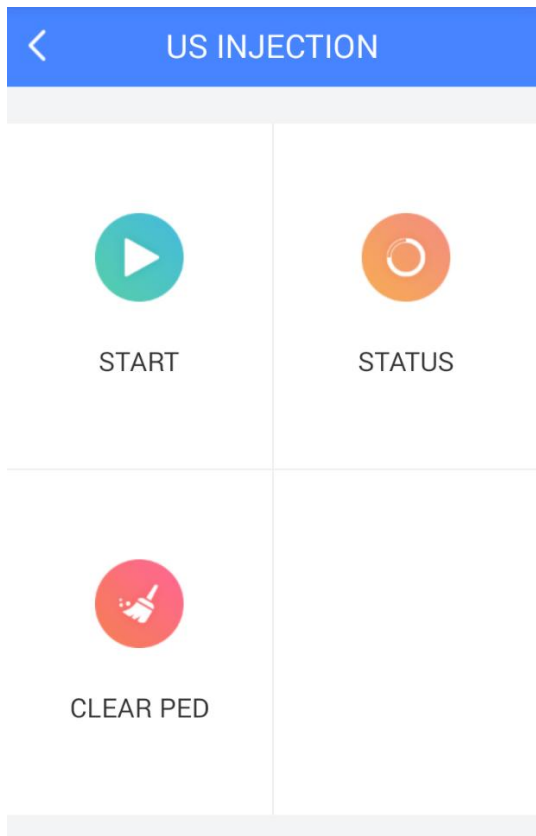

7. Once the status menu loads, send a photo of the results back to Newbold. (Example below)

< US KEY STATUS	
DUKPT	Slot : 0 FFFF53999300000000A
TMK	NOT INJECT
TAK	NOT INJECT